
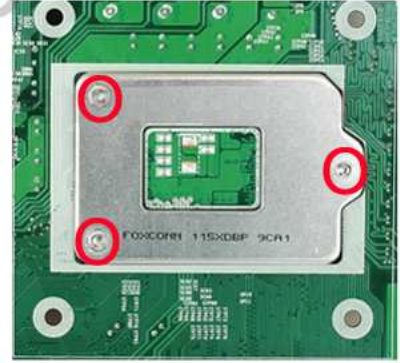


中國工控

IPC CHINA

1U solution for Intel LGA1150 LGA1155 LGA1156 Xeon 1230 CPU Socket clip
April 12, 2019

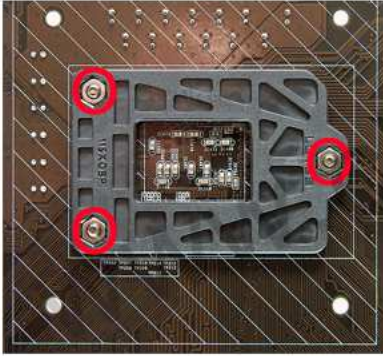

- Solution 1: Shorten the 3 screws at back side of motherboard, see above RED circles
Solution 2: or Drill 3 holes at bottom of 1U chassis in order to accommodate the longer screws
Solution 3: If neither the 1st nor the 2nd solution, please order some #6 x 6mm high screws and some 5mm high plastic stand-off, see the photo below.

